
# SCREW-ON MALE RECEPTACLE LIMITED-DETENT

R222.561.301

Series: SMP

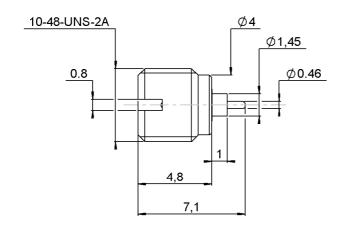



Scale 1:1



All dimensions are in mm.



COMPONENTS	MATERIALS	PLATINGS (μm)
BODY CENTER CONTACT OUTER CONTACT INSULATOR GASKET OTHERS PARTS -	STAINLESS STEEL BERYLLIUM COPPER - PTFE	PASSIVATED . GOLD 1.27 OVER NICKEL 1.27

**Issue:** 1202 B

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



### SCREW-ON MALE RECEPTACLE

#### LIMITED-DETENT

R222.561.301

Series: SMP

## **PACKAGING**

Standard	Unit	Other
100	'W' option	Contact us

## **SPECIFICATION**

## **ELECTRICAL CHARACTERISTICS**

 $\begin{array}{ccc} \text{Impedance} & & \textbf{50} \;\; \Omega \\ \text{Frequency} & & \textbf{0-12} \;\; \text{GHz} \end{array}$ 

VSWR 1.3 + 0,0000 x F(GHz) Maxi

Insertion loss  $0.12 \sqrt{F(GHz)} dB Maxi$  RF leakage -(NA - F(GHz)) dB Maxi

Voltage rating 335 Veff Maxi Dielectric withstanding voltage Insulation resistance 500 Veff mini 5000 M $\Omega$  mini

# **ENVIRONMENTAL**

Operating temperature -65/+165 ° C

Hermetic seal NA Atm.cm3/s

Panel leakage NA

# **OTHERS CHARACTERISTICS**

Assembly instruction

Others:

Voir page 3. See page 3

# **MECHANICAL CHARACTERISTICS**

Center contact retention

Axial force – Mating end
Axial force – Opposite end
Torque

NA N mini
NA N mini
NA N.cm mini

Recommended torque

Mating NA N.cm Panel nut 90 N.cm

Mating life 500 Cycles mini

Weight **0,3000** g

**Issue:** 1202 B

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



## **SCREW-ON MALE RECEPTACLE**


#### LIMITED-DETENT

R222.561.301

Series: SMP


#### ADDITIONAL INFORMATIONS MOUNTING AND REPLEACEMENT INSTRUCTIONS

Panel mounting hole

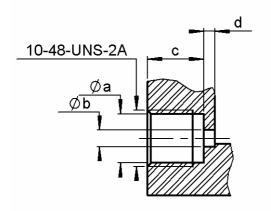


а	4,32
Ь	1,45 - 1,50
C	4,95
d	1,00

- 1. Connector must be screwed or unscrewed with adapted torque driver R282.339.001 (recommanded coupling torque: 90 Ncm) screw driver: R282.360.001
- 2. Slide on the connector in F direction until it stops against the tool.

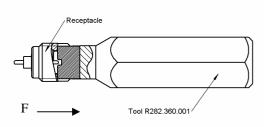

- 3. Screw the whole into the housing until activation of the torque driver.
- 4. Withdraw the tool and solder the center contact

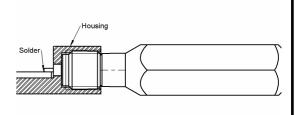

**Issue:** 1202 B

In the effort to improve our products, we reserve the right to make changes judged to be

